



Quick guide to updating your firmware

PUBLISHED - 25 FEB 2021

Z series

QUICK GUIDE TO UPDATING THE FIRMWARE

Z 6 II



Z 7 II



STEP 1 GET READY

You'll need:



Camera



PC or
Mac



Memory
Card

— **STEP 2** LOCATE THE FIRMWARE **DOWNLOADCENTER.NIKONIMGLIB.COM**

To do this:

Go to 'Service and Support'



Select 'Download Center'



Choose camera then 'Firmware'



Select 'View Download Page'



Accept the Nikon License Agreement and 'Download'.



— **STEP 3** THE FIRMWARE FILE

For this stage:

- **Unzip** the download



- **Save** the '.Bin' file to the Memory Card

(do not put the file in a folder)

- **Remove** the memory card from computer.



— **STEP 4** READYING THE CAMERA

Moving back to the camera:

- Insert Memory card and press 'Menu'



- Select 'SETUP MENU'

- Scroll down and select 'Firmware version'.



— STEP 5 INSTALLING THE FIRMWARE

To complete the process:



- Select 'Update' and press 'OK'
- Do not use or turn off while updating
- Once complete, your camera is up to date

Download firmware from [here](#).